# Sportdata Clicker System





### Pre-Conditions

- All SET Point Panel Scoring laptops and the clicker devices have to be in the same network
- The local IP address range is 192.168.1.1 to 192.168.1.255
- All SET Point Panel Scoring laptops have a static IP address
- Reserved addresses for the Clicker boxes:
  - Tatami 1: 192.168.1.12
  - Tatami 2: 192.168.1.22
  - Tatami 3: 192.168.1.32






### **Pre-Conditions 2**

All SET Point Panel Scoring laptops have a disabled windows firewall and any third party firewall software



### Components

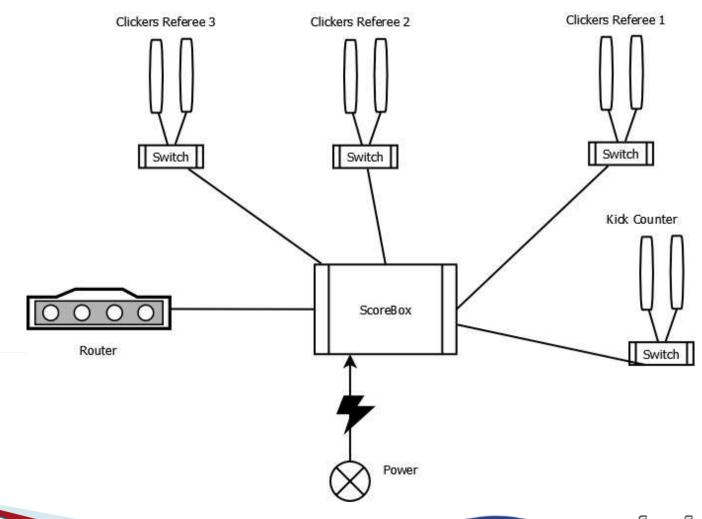




### The ScoreBox

Lan cable (from router)

Referee 2 Clickers Lan-Port

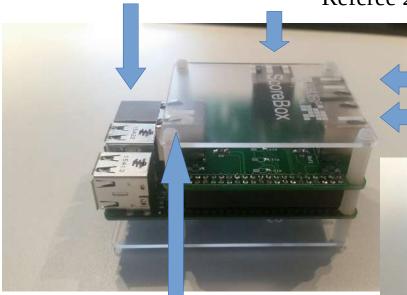

Referee 2 Clickers Lan-Port Referee 1 Clickers Lan-Port

**Kick-Counter** 

Micro-SD Card Slot

Power Adapter



### SoreBox 2

- Before putting the power cable in the SoreBox
  - Make sure your local network is running and configured
  - · Connect all lan cables of all referee clickers
  - Insert the Micro-SD Card (software and operating system)
  - Connect the lan cable from the router
- If all cables are connected put the power cable in the ScoreBox



### **SoreBox Configuration**

- If the ScoreBox is running, you can connect via a browser to the configuration
- URL: http://<IPAddress>:5000
- E.g: http://192.168.1.62:5000

Username: scorebox Password: scorebox

Authentifizierung erforderlich		×
?	http://192.168.1.62:5000 verlangt einen Benutzernamen und ein Passwort. Ausgabe der Website: "Score:Box"	
Benutzername:	scorebox	
Passwort:	•••••	
	OK Abbrechen	



# SoreBox Configuration Page

Score:Box

www.scbx.de



SET Scoring Server: 192.168.1.110

SET Scoring Port: 8080 (default:8080)

SET Scoring Pin: 8996

save check re

reload

<-- always reload after save to load changes!</p>

register Referee 1

register Referee 2

register Referee 3

register KickCounter

.Referee 1 : no\_server

.Referee 2 : no\_server

.Referee 3 : no\_server

.Kickcounter: no\_server



## SoreBox Configuration 2


- SET Scoring Server:
  - This is the SET Point Panel laptops IP– Address
  - SET Scoring Port: 8080
  - SET Scoring Pin
    - The pin generated by the SET Point Panel
    - Press the Authentication button in the SET Point Panel.
    - This will create a new PIN code and QR Code for the authentication URL
    - Note: each time you open the Authentication window a new PIN code will be generated for security reasons





### Clicker authentication

- If the SET Scoring Server IP-Address, the Port and the PIN are set, save the configuration and press reload
- Click on the referee register buttons to send register requests to the SET Point Panel

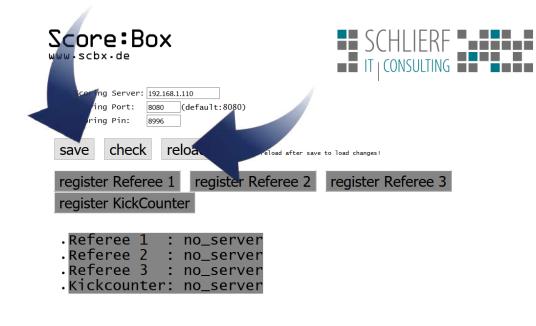





### Clicker authentication 2

In SET Point Panel refresh the device assignement list

Assign the

device

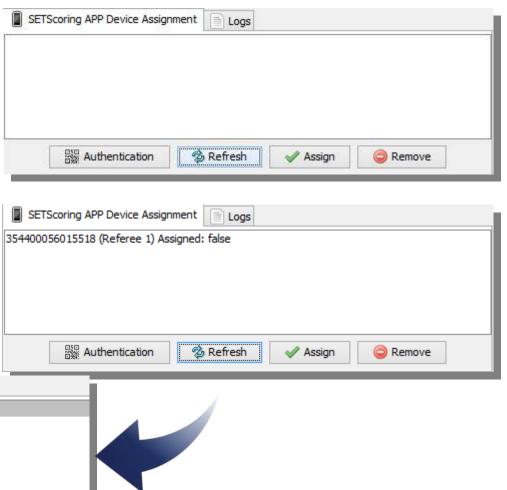

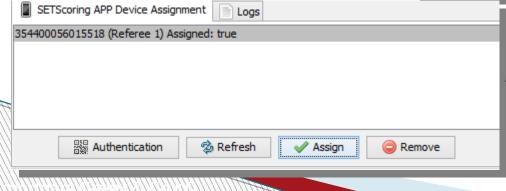





### Clicker authentication 3

After the assignment and approval in SET Point Panel, click on reload

If referees are successfully assigned, the "register Referee" buttons turns into green. Now you can start the SET Point Panel match time and start scoring.

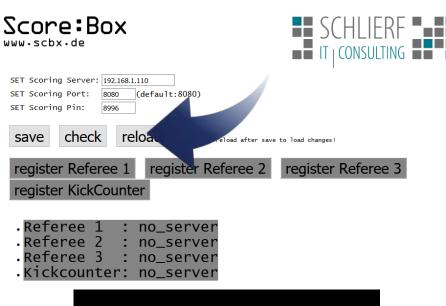

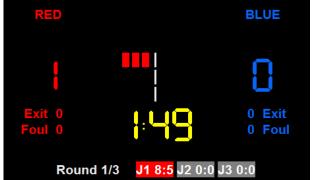



#### **Contact**

- Sportdata GmbH & Co KG Vienna, Austria
- Sportdata GmbH & Co KG Herisau, Switzerland
- Online:
  - www.sportdata.org
  - set.sportdata.org
- Email: office@sportdata.org

